



Chiltern Arch Floor Mirror Hanging, Standing Instruction


IMPORTANT, KEEP THIS DOCUMENT FOR FUTURE REFERENCE

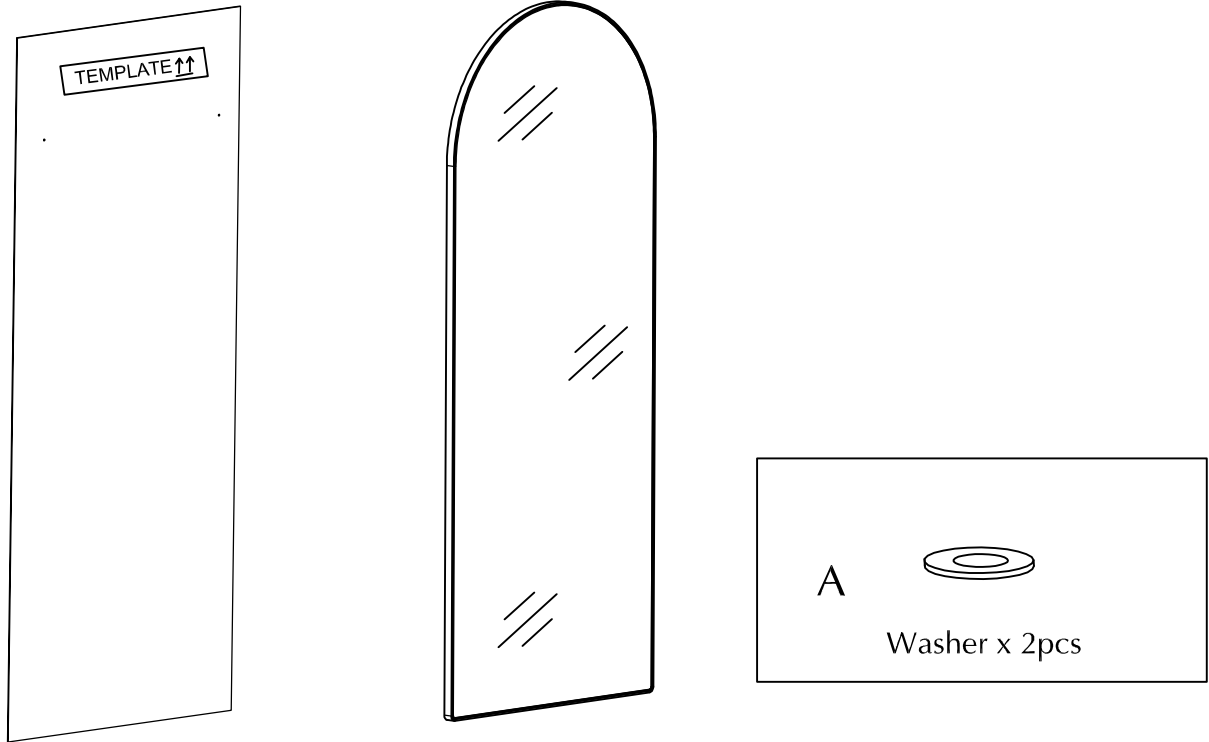


2 people required, one to hold the template and spirit level, and another to mark the wall.

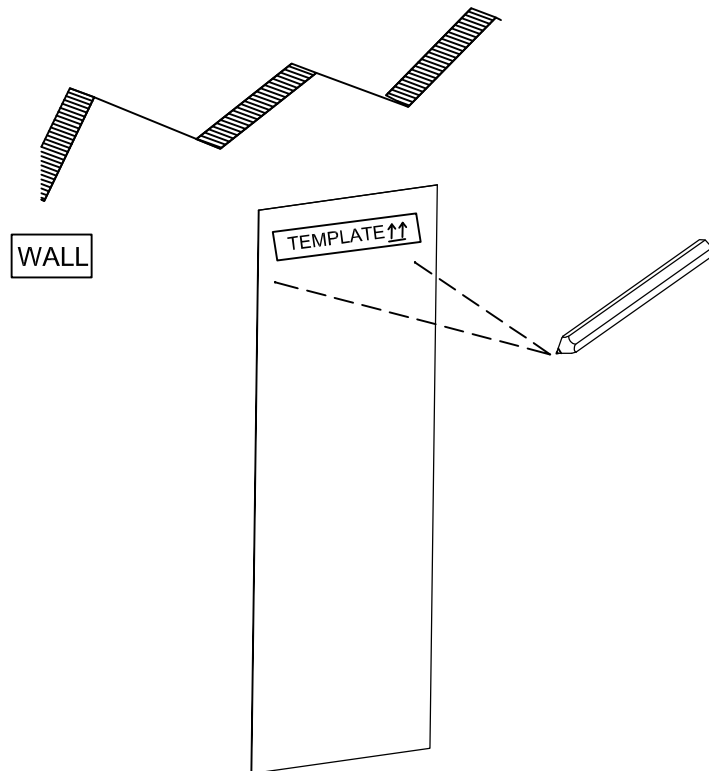

VERTICALLY

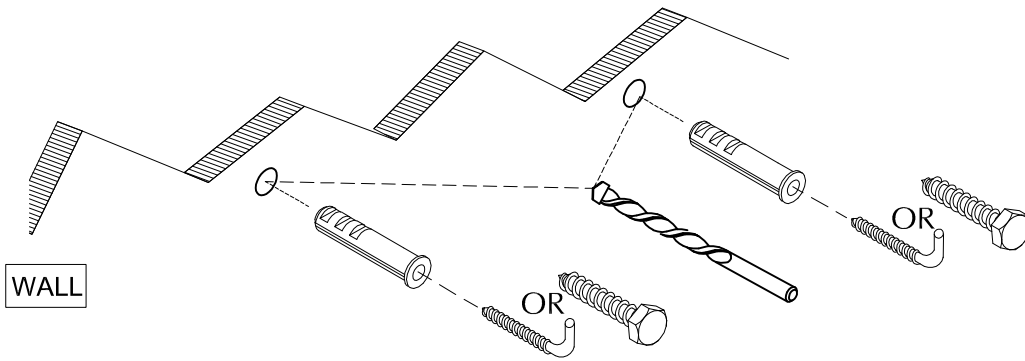


Wall fixing is not supplied, please purchase suitable fixing for the wall and mirror. If in doubt seek professional advice.

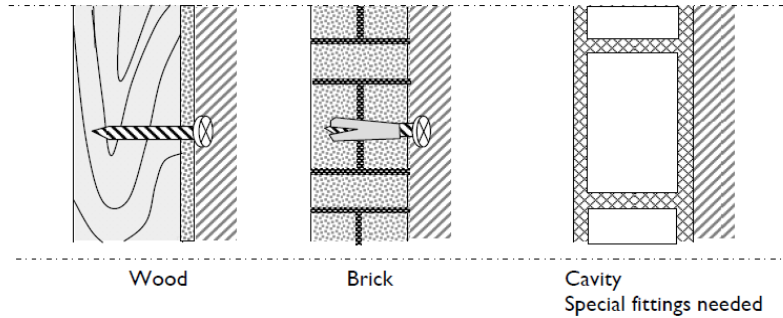



If you are fixing the mirror to a wood substrate, we advise that chipboard is not used as the screws can easily pull away from the structure.

Use appropriate wall plugs. Please ensure that your wall is of sound structure. If in doubt please seek professional advice.

Special toggle wall plugs are needed. Seek expert advice.

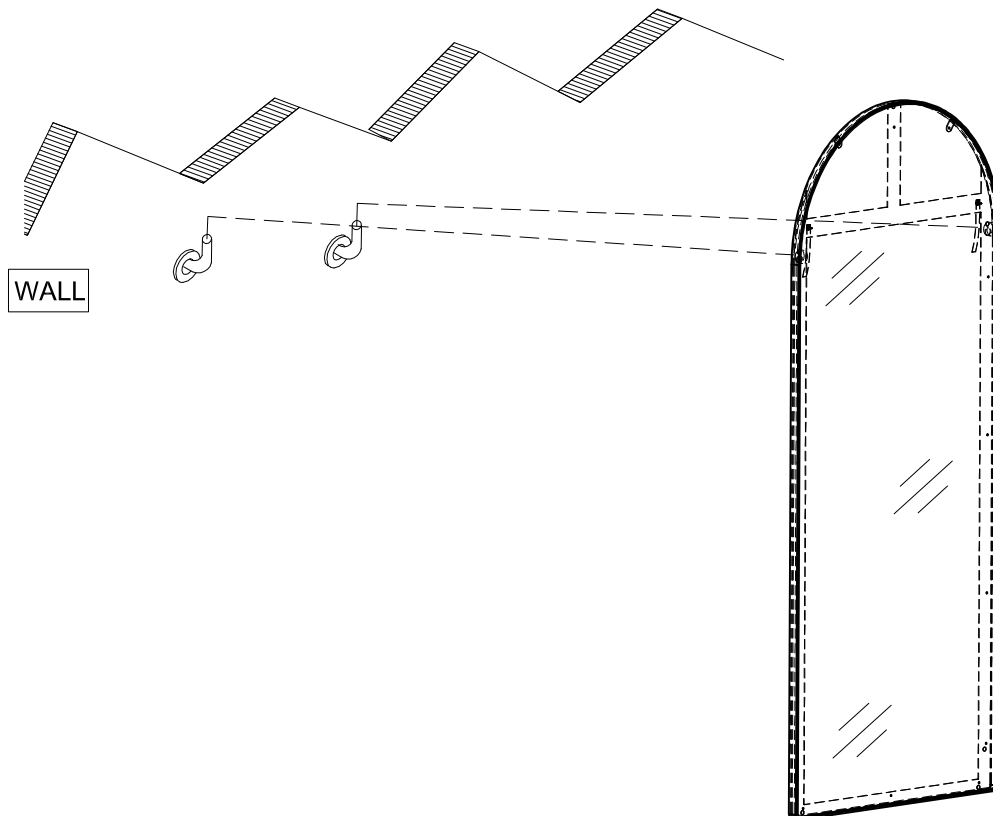


To stand mirror, lean the mirror against the wall as shown below, and fix to the wall using wall strap.

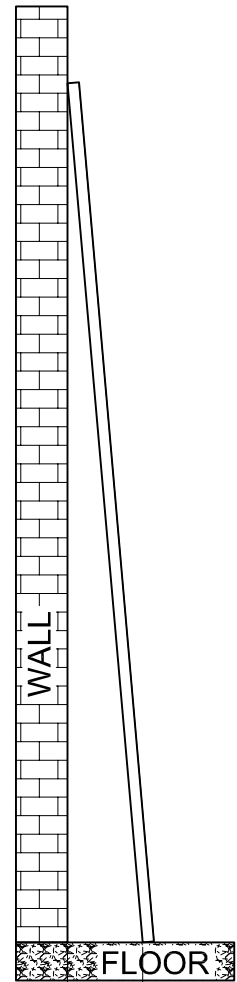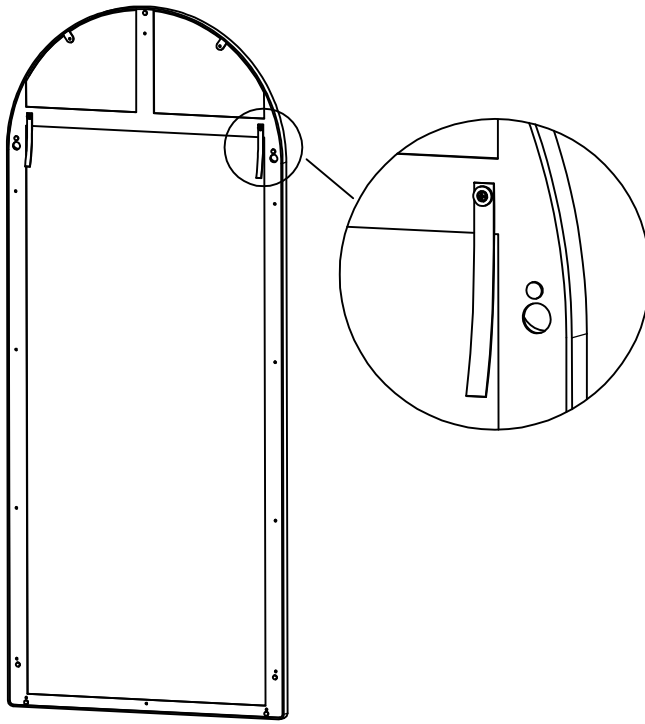


MIN 150mm / MAX 250mm

To make wall strap invisible.


Sign area which mirror cover on the wall.

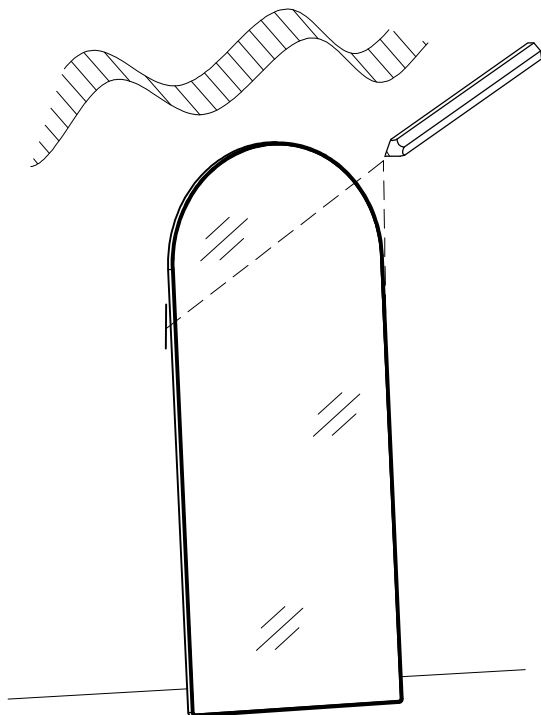



Move mirror right, take wall strap and sign a point to drill.

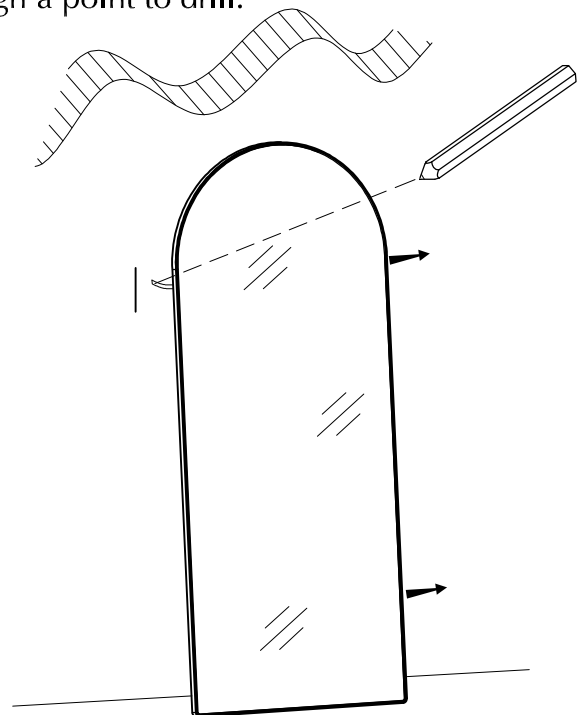

Move mirror left, take wall strap and sign a point to drill.

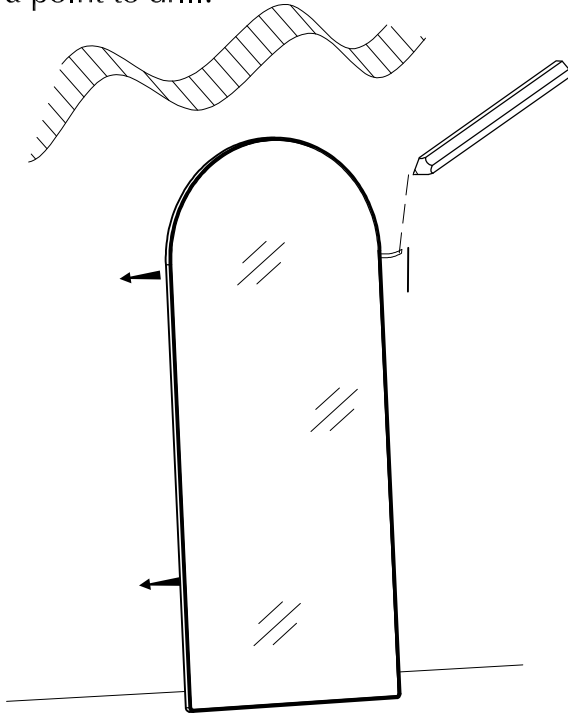

Drill holes in signed points, fix wall straps to the wall and hide under the mirror.

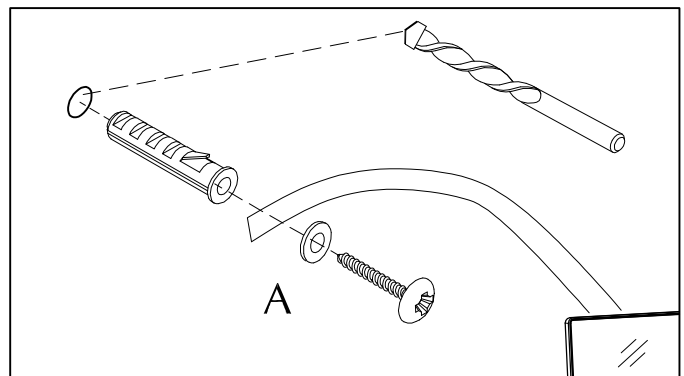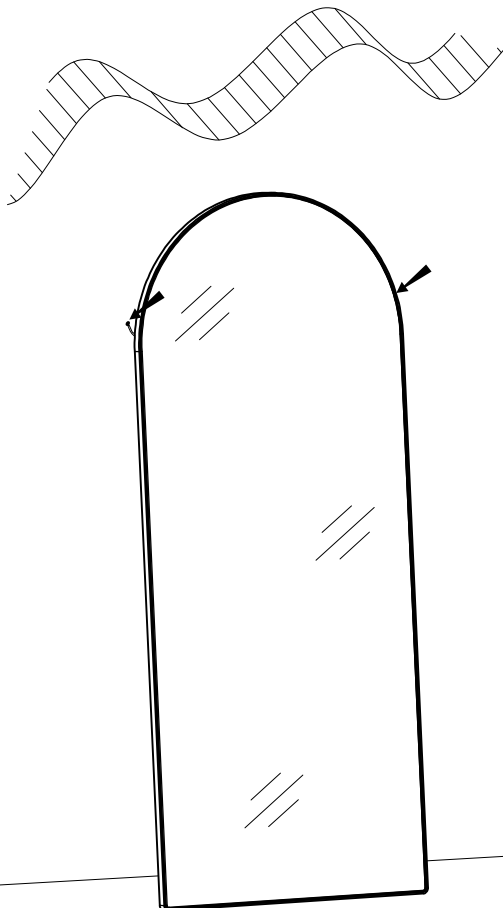

Wall fixing is not supplied, please purchase suitable fixing for the wall. If in doubt seek professional advice. See diagram on page 2.